



Installation & Operating Instructions

To be provided to the owner/user.

IMPORTANT!

PLEASE CHECK ENTIRE UNIT FOR ANY DAMAGE.
If it appears damaged, contact Hydro Dimensions **immediately**.
Warranty does not cover damages that occurs in transit

Contact Customer Service at (855)-287-6349
Monday – Friday 8:00 – 5:00 PST.

TABLE OF CONTENTS

Warranty Confirmation & Product Registration.....	3
Installation Instructions & Pre-Installation Procedures.....	4
Installation Procedures.....	5
Important Safety Instructions.....	6
Electrical Instructions for Dual Massage System	7
Electrical Instructions for Air massage System.....	8
Electrical Instructions for Hydro massage System.....	9
Post Installation Testing and Cleaning.....	10
General Operating Instructions.....	11
Dual Massage Operating Instructions.....	12
Air and Hydro Massage Operating Instructions.....	13
Systems Options Operating Instructions.....	14
Care and Maintenance.....	15
Troubleshooting Guide.....	16
Warranty.....	17

Warranty Confirmation & Product Registration Information

IMPORTANT: To ensure that your warranty is registered and confirmed with the manufacturer, please take a few moments to complete, sign and return the Product Registration Card (below) within 30 days of date of purchase.

WARRANTY CONFIRMATION: By returning this product Registration Card we confirm the date of purchase for your new walk-in bathtub. This confirmation will allow **Hydro Dimensions** to process any warranty claims.

PURCHASE REGISTRATION: The information provided on the Product Registration Card will be kept on file with **Hydro Dimensions** as official purchase registration.

ONLINE REGISTRATION:

www.HydroDimensions.com/Warranty

PRODUCT INFORMATION

The information below will be your reference to help expedite any warranty claim, should the need arise.

Customer Service (855)-287-6349

Product Information Sticker

Congratulations on the purchase of your new Walk-in Bathtub. To ensure the best quality and customer satisfaction, your bathtub was carefully assembled and inspected by the following Hydro Dimensions team members.

Assembled by: _____

Inspected by: _____



Cut here

Hydro Dimensions

Product Registration Card

To ensure your warranty is registered with **Hydro Dimensions** complete, sign and return this registration card within 30 days of the purchase or installation.

NOTE: Your warranty will not be Recognized by **Hydro Dimensions** unless this card is fully completed and returned to **Hydro Dimensions**, 27957 Diaz Road, Temecula , CA 92590

Name _____

Address _____

City _____

Phone _____

Date Purchased _____

Dealer Name _____

Product Information Sticker

I have read the **Hydro Dimensions** Owners Manual carefully and understand and agree that any installation, operation or maintenance of the bath tub must be done strictly in accordance with the instruction guidelines contained in the **Hydro Dimensions** installation and operating instructions.

SIGNATURE _____ DATE _____

INSTALLATION INSTRUCTIONS

READ ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLATION

WARNING: When using this unit, basic precautions should be followed, including the following:

DANGER: RISK OF ELECTRICAL SHOCK. Connect only to a circuit protected by a ground-fault circuit-interrupter (GFCI). Grounding is required; all electrical connections should be made by a licensed electrician, in accordance with the requirements of national electrical codes and procedures.

INSTALLER / OWNER BEARS ALL RESPONSIBILITY TO COMPLY WITH ALL STATE AND LOCAL BUILDING CODES WHEN INSTALLING THIS UNIT

PRE-INSTALLATION PROCEDURES:

1. **Immediately** unpack and inspect the unit thoroughly for freight damage, even if there is no visible damage to the carton. If necessary, contact your dealer/distributor immediately to file a freight claim.
2. All bath tubs are water tested and operated at the factory prior to shipment. However rough handling may cause leaks that can be detected if water tested prior to installation.
3. Place the tub on a flat surface in an area where it may be drained after testing.
4. Never lift the tub by any portion of the hydro massage system piping.
5. Place a plug or tape over the drain, fill the tub with water to the overflow and allow standing for a few minutes.
6. Using an extension cord plug in pump and or blower and run for 10 minutes, inspect the tub/systems for leaks. Turn system off and let stand for 10 minutes. Inspect tub completely (around pump and or blower, all plumbing fittings and door for leaks) any defect must be reported to your dealer/distributor prior to installation in order to have it covered under warranty.
7. Check to ensure that your installation will conform to all applicable codes and secure necessary permits. All electrical and plumbing connections should be made by a qualified electricians and plumbers.

IMPORTANT: FAILURE TO FOLLOW THE PRE-INSTALLATION PROCEDURES, MANUFACTURER WILL NOT BE LIABLE FOR THE REMOVAL OR INSTALLATION OF THE BATHTUB, AND COULD RESULT IN TERMINATION OF THE WARRANTY.


INSTALLATION PROCEDURES:

1. Bathtub must be set on a solid flat surface. All six (6) adjustable feet must come in contact with the floor.
2. Plumbing hardware (faucet, hoses, and waste/overflow) should be installed prior to setting tub in-place.
3. Filler panel is used for 60" opening installations.
4. The drain body is to be installed between the drain shoe and the drain tee.

IMPORTANT:

If your bathtub is equipped with a built in tile flange, pre-drill and screw long back flange to studs. **DO NOT** secure more than one side to studs or force tub flange to studs. This will cause tub door to leak.

NOTE: If your tub is not equipped with a built in tile flange refer to the installation instructions included with the tile flange kit.

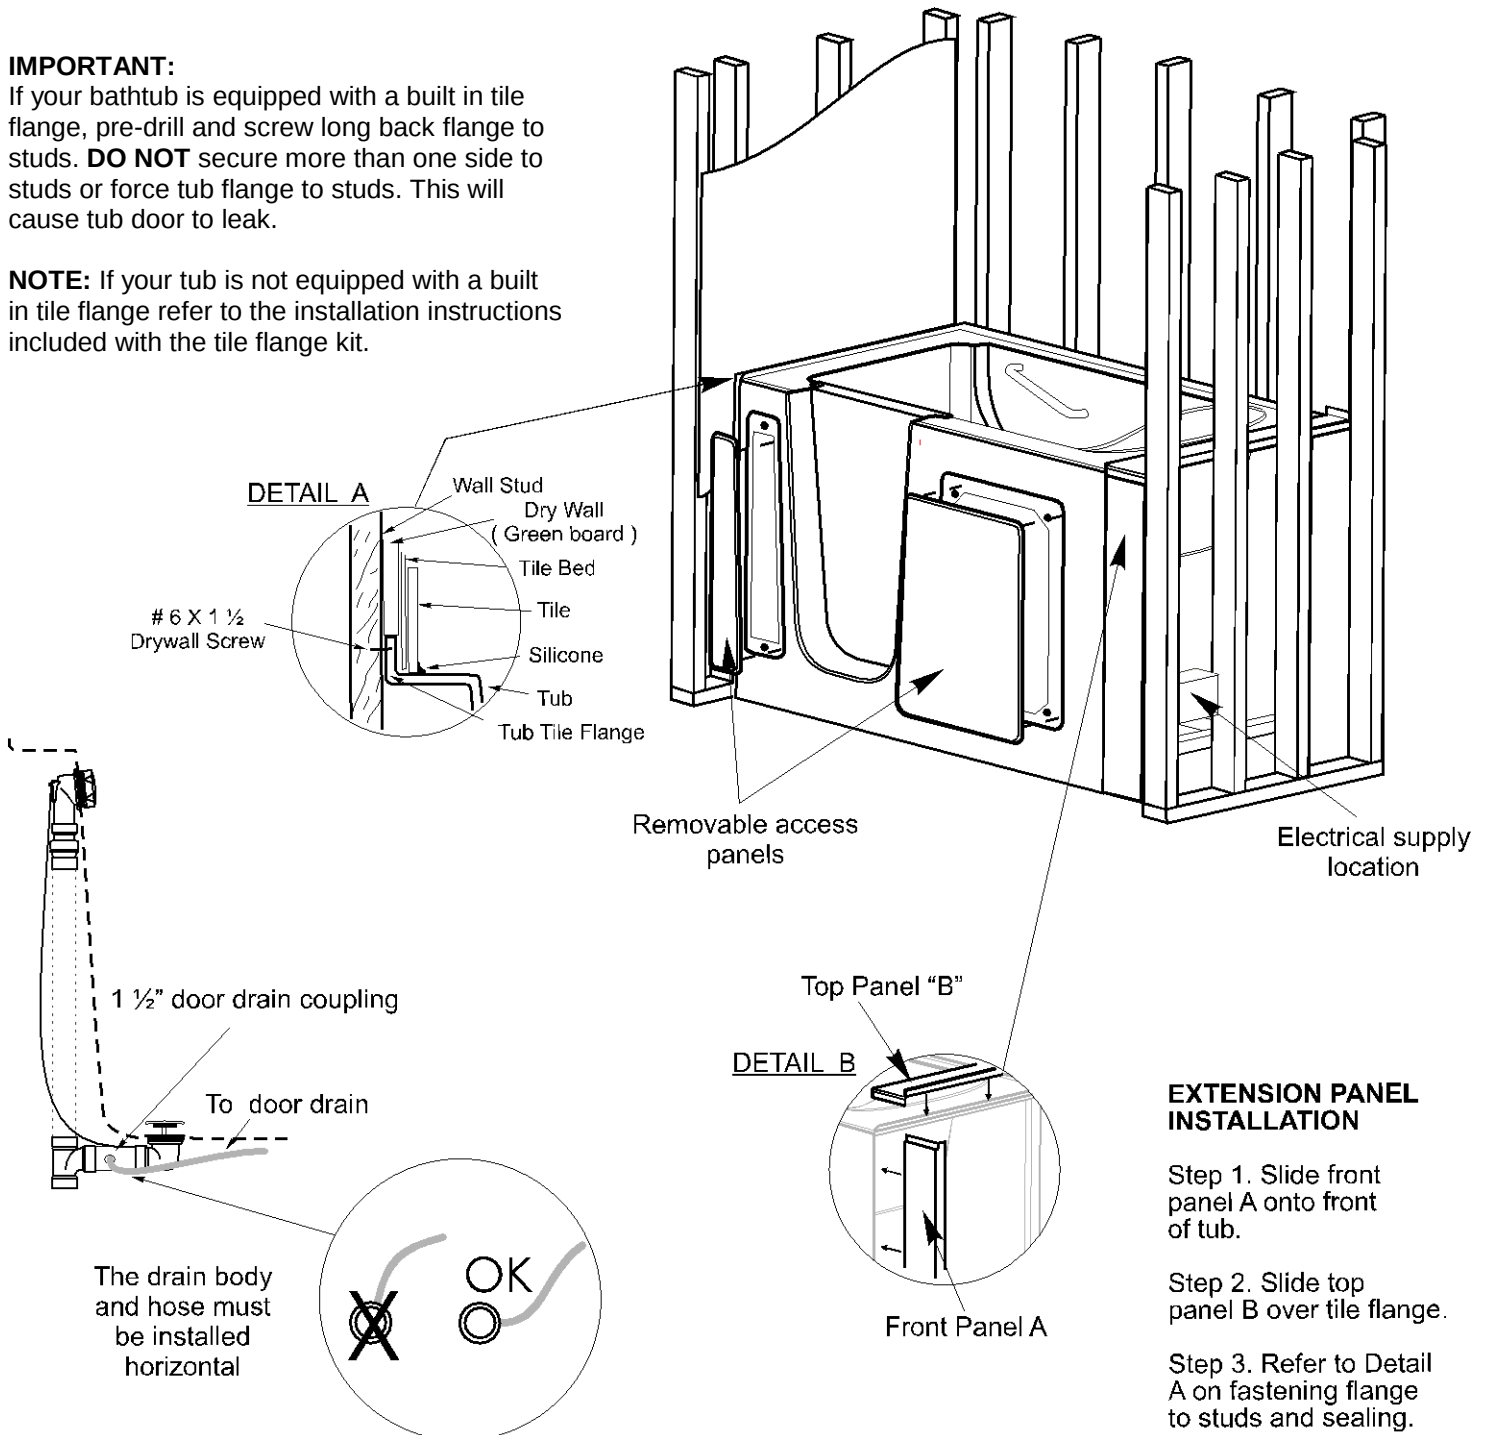

IMPORTANT SAFETY INSTRUCTIONS

INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS.

WARNING: When using this unit, basic precautions should be followed, including the following:

READ AND FOLLOW ALL INSTRUCTIONS

DANGER! TO REDUCE THE RISK OF INJURY:

- A. Do not permit children to use this unit unless an adult closely supervises them at all times. Supervision is also required when an elderly or handicapped individual uses whirlpool bath.
- B. Use this unit only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- C. Do not operate this unit without the guard over the suction fitting. The guard is a safety device that reduces the potential hazard of hair or body entrapment. **Keep hair and body away from suction guard when pump is running.**
- D. Never operate electrically connected devices in or near the bath. No electric appliances should be within 5 feet/1.5 meters of this bathtub (hair dryers, lamp, telephone, radio, television, etc).
- E. Never drop or insert any object in any opening within the whirlpool.
- F. Since excessive water temperatures have a high potential for causing fetal damage during the early months of pregnancy, pregnant or possibly pregnant women should limit whirlpool water temperature to 38°C (100°F).
- G. The use of drugs or alcoholic beverages before or during whirlpool use may lead to unconsciousness with the possibility of drowning.
- H. Persons with a medical history of heart disease, low or high blood pressure, circulatory system problems or diabetes should consult a physician before using a whirlpool.
- I. Persons using medication should consult a physician before using a whirlpool since medication may induce drowsiness while other medication may affect heart rate, blood pressure and circulation.
- J. **A thermostatic mixing valve is required.** Section 414.5 of the 2009 Uniform Plumbing Codes require that the maximum hot water temperature discharging from the bathtub and/or whirlpool bathtub filler shall be limited to 120°F (49°C) by a device that conforms to ASSE 1070 or CSA B125.3. The water heater thermostat shall not be considered a control for meeting this provision.
- K. The water in a whirlpool should never exceed 40°C (104°F). Water temperatures between 38°C (100°F) and 40°C (104°F) are considered safe for a healthy adult. Use time should be limited to approximately 30 minutes, followed by a shower to cool down. Lower water temperatures are recommended for extended use (exceeding 10-15 minutes) and are definitely recommended for younger children. If you become nauseous, dizzy or develop a headache, get out at once and cool down. Get medical attention if symptoms persist. Check with a physician before using whirlpool again.
- L. This unit must be connected to a circuit that is protected by a Ground Fault Circuit Interrupter (GFCI). The GFCI should be provided and installed by a licensed electrician and tested on a regular basis (at least monthly). To test the GFCI push the **TEST** button. The GFCI should interrupt the power. Push the **RESET** button and the power should be restored. If the GFCI fails to operate in this manner there is a possibility of an electric shock, **DO NOT OPERATE THIS UNIT.** Disconnect the unit and have the problem corrected by a licensed electrician before using.

CAUTION: DO NOT USE HARSH ABRASIVES OR SOLVENTS FOR CLEANING THIS UNIT.

SAVE THESE INSTRUCTIONS

ELECTRICAL INSTRUCTIONS:


WARNING: The following are electrical requirements for a Dual, Hydro and Air Massage System, your tub/system may have additional electrical requirements. Please refer to the electrical diagram located inside the large access panel on the front of the tub.

DUAL MESSAGE SYSTEM

1. Dual message system requires two dedicated 15-amp 120-volt services one (1) for hydro massage pump and one (1) for the air massage blower.
2. Two dedicated 15-amp configuration must be provided by the electrician.

NOTE: Provide a power supply outlet (receptacle) appropriately rated for each load. For voltage and current requirements refer to the label on each load.

HYDRO & AIR MESSAGE WIRING

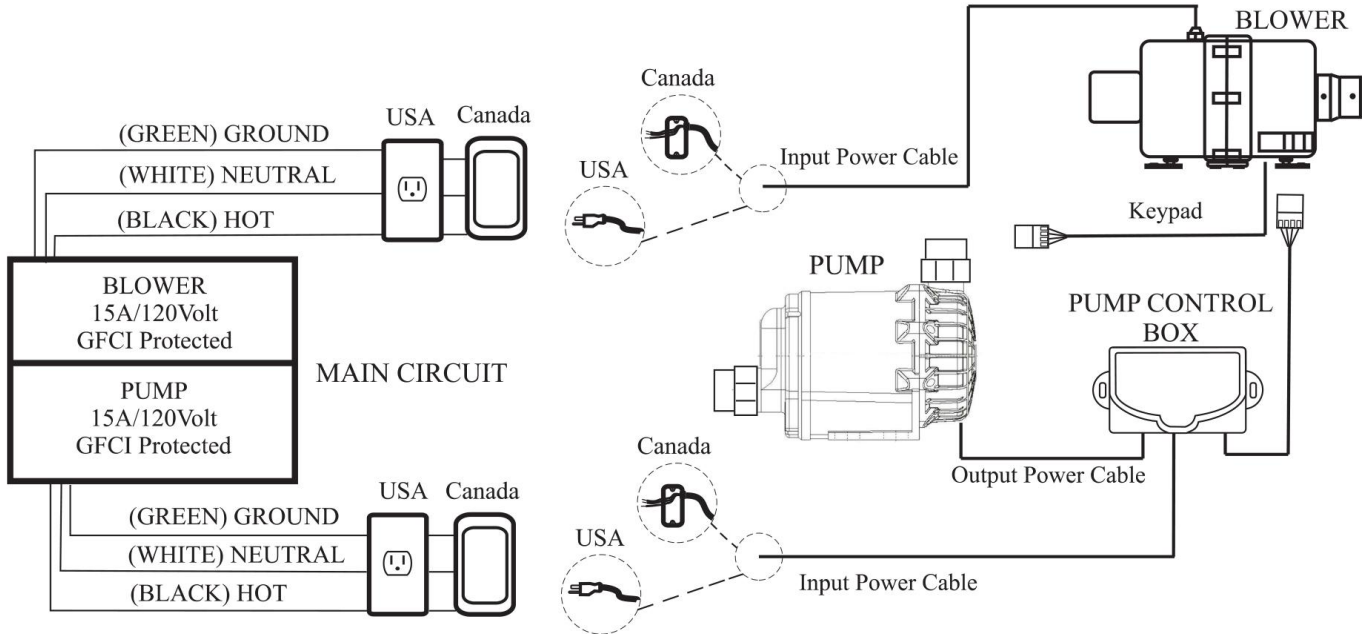

Note: Your system may have additional electrical requirements. Provide a power supply outlet (receptacle) appropriately rated for each load. For voltage and current requirements refer to the label on each load.


ELECTRICAL INSTRUCTIONS:

WARNING: The following are electrical requirements for a Dual, Hydro and Air Massage System, your tub/system may have additional electrical requirements. Please refer to the electrical diagram located inside the large access panel on the front of the tub.

AIR MASSAGE SYSTEM

1. Air massage system requires one dedicated 15-amp 120-volt services one
2. One dedicated 15-amp configuration must be provided by the electrician.

NOTE: Provide a power supply outlet (receptacle) appropriately rated for each load. For voltage and current requirements refer to the label on each load.

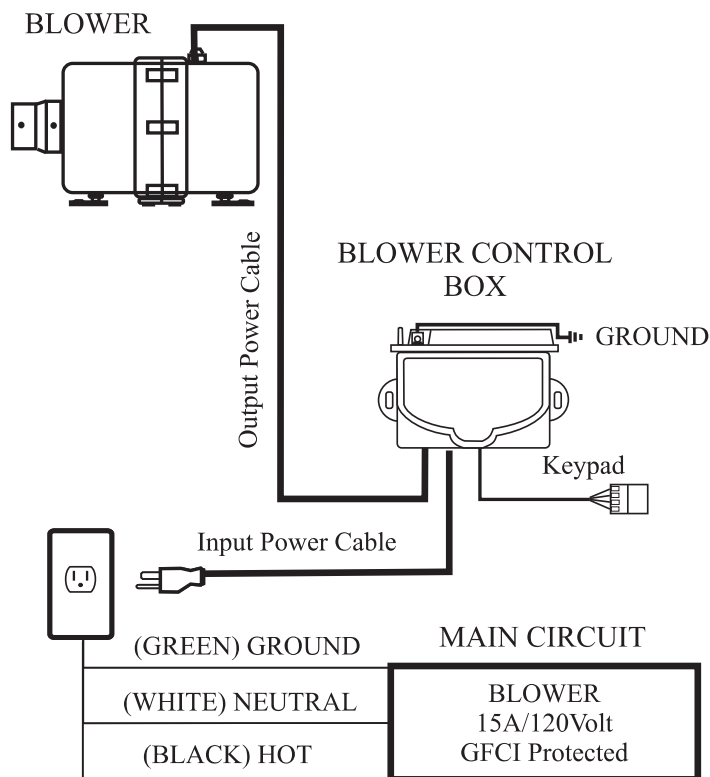

Note: Your system may have additional electrical requirements. Provide a power supply outlet (receptacle) appropriately rated for each load. For voltage and current requirements refer to the label on each load.


ELECTRICAL INSTRUCTIONS:

WARNING: The following are electrical requirements for a Dual, Hydro and Air Massage System, your tub/system may have additional electrical requirements. Please refer to the electrical diagram located inside the large access panel on the front of the tub.

HYDRO MASSAGE SYSTEM

1. hydro massage system requires one dedicated 15-amp 120-volt services one
2. One dedicated 15-amp configuration must be provided by the electrician.

NOTE: Provide a power supply outlet (receptacle) appropriately rated for each load. For voltage and current requirements refer to the label on each load.

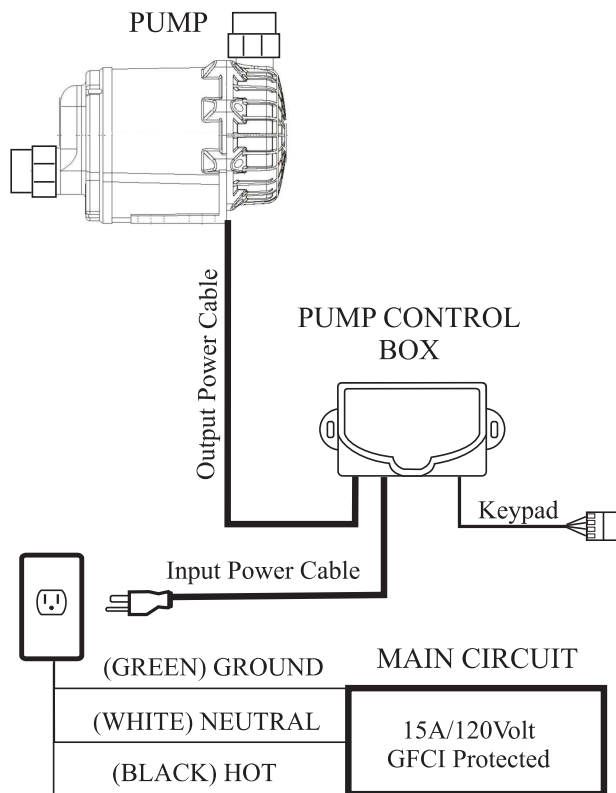

Note: Your system may have additional electrical requirements. Provide a power supply outlet (receptacle) appropriately rated for each load. For voltage and current requirements refer to the label on each load.

POST - INSTALLATION TESTING AND CLEANING:

SYSTEM TEST: After installation make sure all plumbing connections and hydro massage and air massage system connections are correctly installed, run the following tests.

1. Before filling the tub with water, be sure to remove all loose debris from tub. Wipe down the door seal using a damp cloth, as well as the surface in the door jamb that will come in contact with the door seal.
2. Fill the tub to the overflow and check for leaks. Check by hand where visual verification is not possible.
3. Turn the pump and or blower on and let run for at least 15 minutes. Check for leaks while the system/systems are running and again after you turn them off. Check by hand where visual verification is not possible.

Refer all service issues to your dealer/distributor.

CLEANING:

WARNING: Under no circumstances use wire brushes, metal sponges, knives, steel wool or scouring pads on any part of the tub, or solvents that contain petroleum distillates such as acetone, lacquer, paint thinner, benzene or abrasive cleanser on any part of the tub. **DO NOT USE** ammonia or chlorine-based agents on any plated surface. These products will remove the plating, thereby voiding the warranty on the plated finish.

1. Remove any blobs of plaster and/or dabs of paint that have adhered to the surface by gently scraping them off with the sharpened edge of a makeshift spatula fashioned out of wood.
2. Oil or grease spots can be lifted with denatured alcohol.
3. Use liquid, non-bleach and automatic dishwashing detergent to remove any construction residue.
4. For tough stains and surface scratches lightly rubbing with a liquid cleaning compound (such as polishing compound used for cars), followed by a light application of liquid or paste wax, will restore luster to any dulled surface.
5. Clean plated surfaces with warm water only.


SAVE THESE INSTRUCTIONS

IMPORTANT OPERATING INSTRUCTIONS

CAUTION: DO NOT OPERATE THE HYDRO MASSAGE SYSTEM WITH ANY PARTS OR FITTINGS REMOVED.

1. Use this unit only for its intended use as described in the manual.
2. To avoid injury, exercise care when entering or exiting the bathtub, the floor may be slippery.
3. **Do not** use door as support while entering or exiting the bathtub, as door may swing with applied weight.
4. **Do not** add liquids or powders to the water, especially foamy, bubbly or oily types other than those recommended for Hydromassage Bathing or detergent used for cleaning the Hydromassage system.
5. Risk of hypothermia and drowning, (refer to IMPORTANT SAFETY INSTRUCTIONS) **Do not** use hydro massage bathtub after strenuous exercise. However under no circumstances use a bathtub with water above 104°F (40°C).
6. Enter your bathtub and latch the door securely. The forward motion of the door lock seals the door.
7. Be certain tub drain is open as first water coming from tub spout may be too cold or too hot. Carefully test water temperature by slowly moving hand into water stream.
8. After adjusting water temperature, move the drain valve handle all the way to the left to close the tub drain.
9. After bathing and before draining tub check and make sure door latch is in its locked position (all the way forward). Turn the overflow valve handle all the way to the right to open the drain. **Do not open door until all water has been drained from the bathtub.**
10. Be careful while exiting the bathtub, water on the floor or in tub may cause slippery conditions.
11. Be sure tub door remains in the open position when not in use. Failure to do so could deform door gasket causing the tub door to leak.

DUAL MESSAGE OPERATION

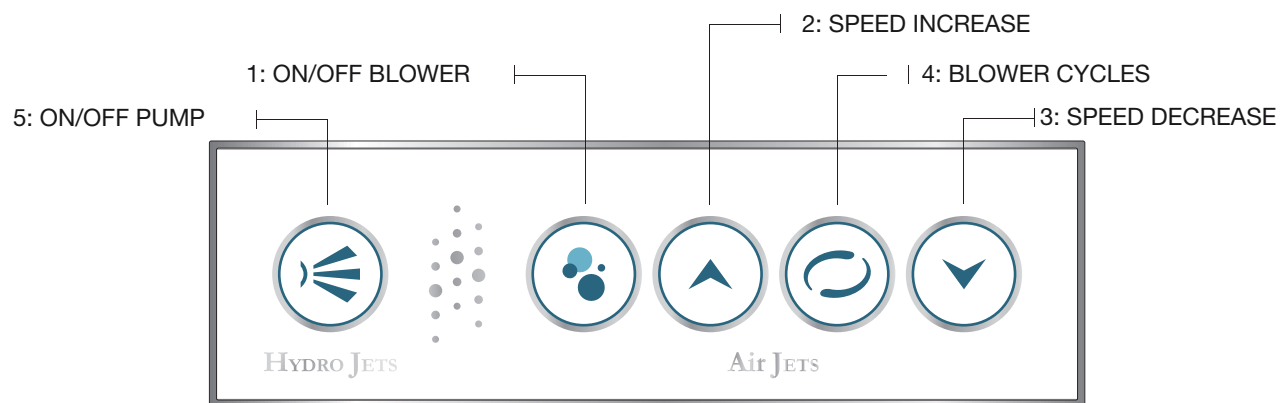

EAS KEYPAD FUNCTIONS	LED
1: ON/OFF BLOWER 1 st Press: The blower starts at medium speed. 2 nd Press: The blower stops.	ON OFF
2: SPEED INCREASE Press and hold to increase the blower speed, release pressure at the desired speed.	ON (WHEN PRESSED)
3: SPEED DECREASE Press and hold to decrease the blower speed, release pressure at the desired speed.	ON (WHEN PRESSED)
4: BLOWER CYCLES 1 st Press: Wave Cycle - Speed goes gradually from maximum to minimum. 2 nd Press: Pulse Cycle - Speed goes rapidly from maximum to minimum. 3 rd Press: Returns to maximum speed.	ON BLINK OFF
5: ON/OFF PUMP 1 st Press: The pump starts 2 nd Press: The pump stops	ON OFF


ADVANCED PROGRAMMING

INTEGRATED 20 MINUTE AUTOMATIC TIMER
 Integrated 20 minutes automatic timer on the complete system. Count down starts when the blower starts.

DRYING CYCLE
 A 1 minute automatic drying cycle will start 20 minutes after the blower is turned off.
 The blower LED blinks while waiting for the purge cycle

24H PROGRAMMABLE DRYING CYCLE
 The system must be stopped prior to activation or deactivation. Activation:
 Determine at which time you wish the purge to activate. At that precise time, press and hold the second button on the keypad for 5 seconds, all LEDs will flash twice to confirm activation.
 The purge cycle will now start at the programmed time every 24 hrs. In the event of a power failure, the program will be automatically deactivated.
 Deactivation:
 Press and hold the second button on the keypad for 5 seconds, all LEDs will flash once to confirm deactivation.

AIR & HYDRO MASSAGE OPERATION

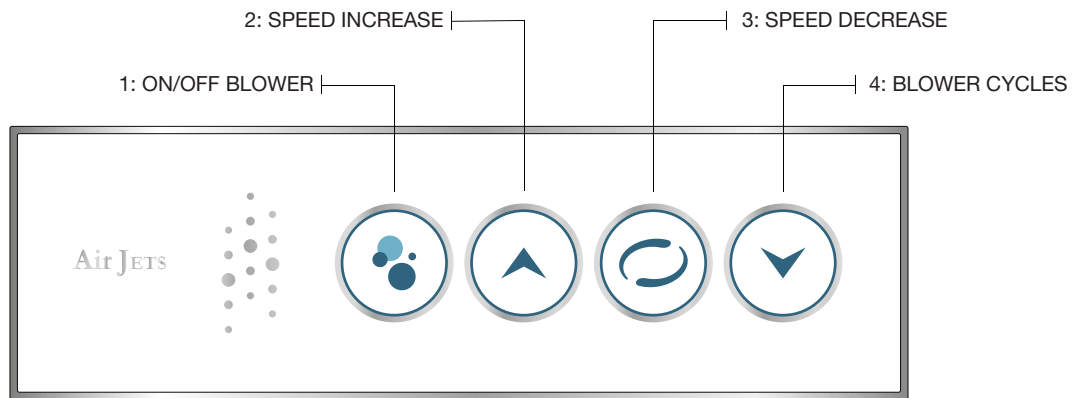

AIR KEYPAD FUNCTIONS	LED
1: ON/OFF BLOWER 1 st Press: The blower starts. 2 nd Press: The blower stops.	ON OFF
2: SPEED INCREASE Press and hold to increase the blower speed, release pressure at the desired speed.	ON (WHEN PRESSED)
3: SPEED DECREASE Press and hold to decrease the blower speed, release pressure at the desired speed.	ON (WHEN PRESSED)
4: BLOWER CYCLES 1 st Press: Wave Cycle - Speed goes gradually from maximum to minimum. 2 nd Press: Pulse Cycle - Speed goes rapidly from maximum to minimum. 3 rd Press: Returns to maximum speed.	ON BLINK OFF

ADVANCED PROGRAMMING
INTEGRATED 20 MINUTE AUTOMATIC TIMER Integrated 20 minutes automatic timer on the system.
DRYING CYCLE A 1 minute automatic drying cycle will start 20 minutes after the blower is turned off. The blower LED blinks while waiting for the purge cycle
24H PROGRAMMABLE DRYING CYCLE The system must be stopped prior to activation or deactivation. Activation: Determine at which time you wish the purge to activate. At that precise time, press and hold the second button on the keypad for 5 seconds, all LEDs will flash twice to confirm activation. The purge cycle will now start at the programmed time every 24 hrs. In the event of a power failure, the program will be automatically deactivated. Deactivation: Press and hold the second button on the keypad for 5 seconds, all LEDs will flash once to confirm deactivation.


1: ON/OFF PUMP




HYDRO KEYPAD FUNCTIONS	LED
1: ON/OFF PUMP 1 st Press: The pump starts 2 nd Press: The pump stops	ON OFF
ADVANCED PROGRAMMING	
INTEGRATED 20 MINUTE AUTOMATIC TIMER Integrated 20 minute automatic timer on the system.	

SYSTEM OPTIONS

1: ON/OFF CHROMATHERAPY

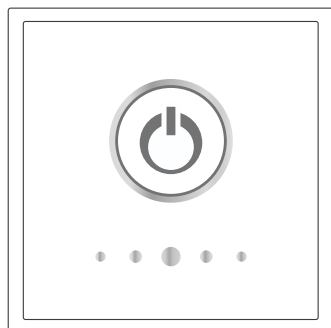

1: ON/OFF PURE BUBBLES

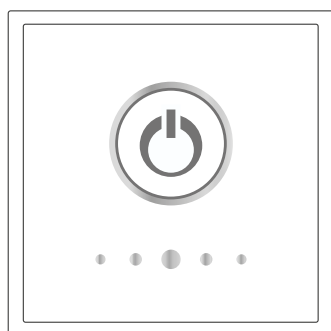

1: ON/OFF AROMATHERAPY



6: ComfortWarm™ System



CHROMATHERAPY FUNCTIONS

- 1st Press: Turns on the light in white.
- 2nd Press: Rainbow cycle – Low speed.
- 3rd Press: Rainbow cycle – High speed.
- 4th Press: Turquoise
- 5th Press: Blue
- 6th Press: Magenta
- 7th Press: Red
- 8th Press: Orange
- 9th Press: Yellow
- 10th Press: Green
- 11th Press: The chromatherapy stops.

HYDRO JETS ADVANCED PROGRAMMING

- Press and hold for 2 seconds at anytime to turn off the Chromatherapy system.
- Integrated 20 minute automatic timer.

PURE BUBBLES KEYPAD FUNCTIONS

LED

1: ON/OFF PURE BUBBLES

- 1st Press: The Pure Bubbles system starts
- 2nd Press: The Pure Bubbles system stops

ON
OFF

PURE BUBBLES ADVANCED PROGRAMMING

INTEGRATED 20 MINUTE AUTOMATIC TIMER
Integrated 20 minute automatic timer on the system.

AROMATHERAPY KEYPAD FUNCTIONS

LED

1: ON/OFF AROMATHERAPY

- 1st Press: The aromatherapy starts
- 2nd Press: The aromatherapy stops

ON
OFF

AROMATHERAPY ADVANCED PROGRAMMING

INTEGRATED 20 MINUTE AUTOMATIC TIMER
Integrated 20 minute automatic timer on the system.

COMFORTWARM KEYPAD FUNCTIONS

LED

6: ComfortWarm™

- 1st Press: The ComfortWarm™ starts
- 2nd Press: The ComfortWarm™ stops

ON
OFF

COMFORTWARM ADVANCED PROGRAMMING

INTEGRATED 30 MINUTE AUTOMATIC TIMER
Integrated 30 minute automatic timer on the system.

CARE AND MAINTENANCE

Regular care of your walk-in tub with the hydro massage system will keep it clean and working at its best. This care should include the tub, the trim and fittings and internal water-carrying part of the pipe system.

No maintenance is required for the pump or the motor powering it. The motor is lubricated for life. The shaft and seals in the pump are water lubricated and self-adjusting.

Because of the detrimental effects that mineral deposits, soap scum and bacteria have on finished surfaces, it is important to keep your bathtub and the fixtures (fittings) of your walk-in hydro massage system clean on a regular basis. The best way to counteract the soiling and often time corrosive action of these residues is to prevent water from remaining on any finished surface.

NOTE: DO NOT USE OIL OR OIL BASED BATH ADDITIVES.

If you choose to use any kind of bath additives, use only a small amount of low-foaming powder or crystal substance. The hydro massage action intensifies the foaming properties of soap.

REGULAR CLEANING

1. After each use, rinse all exposed surfaces with warm water, then wipe tub completely dry.
2. Once a week, wash all exposed surfaces of the bathtub. Oily or greasy spots can be lifted with denatured alcohol.
3. To preserve the tub finish, waxing is recommended. Products such as Gel Gloss or a marine grade wax will maintain the tub finish. You can find them at most hardware stores.
4. It is especially **IMPORTANT** to wipe down the door seal and door jamb with a soft cloth weekly in order to maintain the integrity of the water seal. In order to keep the door seal and door jamb clean and not accumulate dirt or debris of any kind, clean seal and jamb with a mixture of water and vinegar.
5. **Once a month purge and clean the entire system using 1/8 cup of liquid laundry detergent.** Products such as Tide, Gain or Cheer will remove body and bath oils and other sources that can contribute to bacterial growth in the hydro massage system.

Follow these steps:

1. Fill the tub with warm water to the overflow.
 2. Turn on the hydro massage system and pour detergent in the water. Run the system for 15 minutes or until bubbles start to overflow. Turn off system and let stand for 15 minutes. Turn system back on and run for another 15 minutes or until bubbles overflow. Turn system off and drain tub.
 3. Refill tub with cold water and run system for another 15 minutes to rinse out the plumbing. Using your hand held shower rinse out tub then dry with a soft cloth.
6. Be sure tub door remains in the open position when not in use. Failure to do so could deform door gasket causing the tub door to leak.

WARNING: Under no circumstances use wire brushes, metal sponges, knives, steel wool or scouring pads on any part of the tub, or solvents that contain petroleum distillates such as acetone, lacquer, paint thinner, benzene or abrasive cleanser on any part of the tub. DO NOT USE ammonia or chlorine-based agents on any plated surface. These products will remove the plating, thereby voiding the warranty on the plated finish.

USER SERVICE INSTRUCTIONS

1. There are no user serviceable parts. All service, repairs must be performed by a qualified service technician in accordance with all applicable local and national codes.
2. For replacement parts contact your dealer/distributor.

TROUBLESHOOTING GUIDE

WARNING: Always turn off power at main electrical service panel when servicing your walk in bathtub.

SYMPTOMS	PROBLEMS	SOLUTIONS
• Motor will not start.	• GFCI or breaker in off position. • Disconnected or defective wiring	• Reset GFCI or breaker. • Check and reconnect if needed.
• Breaker trips repeatedly.	• Short between bath and breaker. • GFCI or breaker defective.	• Check for short in wiring. • Replace GFCI or breaker.
• Motor does not reach full Speed.	• Low voltage. • Wiring too small.	• Contact your electrician. • Contact your electrician.
• Motor overheats.	• Low voltage. • Wiring too small. • Inadequate ventilation.	• Contact your electrician. • Contact your electrician. • Gain ventilation to motor.
• Leaking around pump.	• Loose unions. • O-ring missing.	• Hand tighten unions. • Replace O-ring.
• No pressure out of back Jets.	• Jet in closed position.	• Turn jet face ½ turn left or right
• No air out of lower bathing well air jets In low speed.	• Speed of blower set to low.	• Increase blower speed until all jets are working.

DOOR SEAL LEAKING

If a small leak has been detected around the door, check closely for any accumulation of dirt or debris. Any small collection of either on the door seal or where the seal comes in contact with the door jamb could result in a minor leak through the door seal.

1. Before filling tub with water, be sure to wipe down the door seal using a damp soft cloth, as well as the surface on the door jamb that will come in contact with the seal.
2. Once the above surfaces have been wiped clean, be sure that when closing the door, the latch is completely locked forward

NOTE: When draining the water from the tub, be sure that the door latch is in the locked position (forward). If the latch is not secure when draining the tub, as the water level lowers, the pressure on the door will be reduced, thus increasing the possibility of a leak around the door.

LIFETIME WARRANTY

This Lifetime Warranty is extended to the first user to be free from product defects in workmanship and material under normal use and conditions from the date of original purchase. **Product registration card must be mailed to Hydro Dimensions 27957 Diaz Road Temecula, CA 92590 to activate this warranty.** Warranty relates to all fitting and components included with the tub from the manufacturer.

This warranty is non-transferable and applies only to the original owner. This warranty shall not apply to any type of fading, cracking, delamination, sun fading, scouring or blistering due to excessive wear, or failure resulting from negligence, abuse, misuse, misapplication, improper installation, alteration or modification, chemical corrosion or improper maintenance. There will be a charge for replacement parts or replacement of the entire electrical unit if the defective unit is returned for any of the reasons listed above

Should service be required within the first year from date of purchase, manufacturer will warranty parts and labor related to replacing or repairing the part or product without charge subject to verification of the defect or malfunction of the product or part(s). Hydro Dimensions requires any defective parts be sent to Hydro Dimensions mailing address. Notification MUST BE sent via certified mail to **Hydro Dimensions 27957 Diaz Road Temecula, CA 92590.**

Should service be required **after** the first year from date of purchase, manufacturer warrants the product and part(s) for the life of the unit under normal use and conditions. This warranty shall not apply to any failure resulting from negligence, abuse, misuse, misapplication, alteration or modification or improper maintenance. The replacement part(s) will be issued to the end user and it will be the responsibility of the end user to determine the means of installation. Manufacturer will not be liable for any incidental expenses or material charges in connection with removal or replacement of the part(s).

Hydro Dimensions Lifetime Warranty includes:

- Bathtub shell, frame and finish
- Door seal
- Supporting equipment
- Motors & electronic controls
- Faucet, waste & overflow

The Manufacturer will not be responsible for any water damage to structures or property for any reason including but not limited to manufacturer defects or improper installation. Manufacturer will assume no responsibility for the loss of the system, inconvenience due to loss, damage to real or personal property or any other consequential damage. Manufacturer will not be liable for any incidental expenses or material charges in connection with removal or replacement of the walk-in bathtub or any part or parts of the product.

Manufacturer reserves the sole authority to make any type of warranties or representations concerning its products and will not be responsible for any warranties or representations made by any outside source, including dealers, retailers, distributors or contractors.

Manufacturer does not warrant the installation of any of our products including Walk-in Baths, shower pans or shower stalls. Items include all plumbing or electrical related connections. Improper or negligent installation of the product or other components, alteration made of, or alterations or modifications to the Product, may cause the Product to malfunction. Such issues are not covered by the warranty.

TO THE EXTENT PERMITTED BY LAW, ALL IMPLIED WARRANTIES INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. **Hydro Dimensions** AND SELLER HEREBY DISCLAIM ANY LIABILITY FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES. Some states/provinces do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of special, incidental or consequential damages, so these limitations and exclusions may not apply to you. This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

This is the only warranty expressed or implied by **Hydro Dimensions.**

CUSTOMER SERVICE

Contact Customer Service at (855)-287-6349
Monday – Friday 8:00 – 5:00 PST
support@hydrodimensions.com



27957 Diaz Road
Temecula, Ca 92590
Ph: 951-676-7290 • Fax 951-676-7292
E-mail: sales@hydrodimensions.com